


Instructions: Two-tone Tote

Prepare bag pieces:

1. If not done already, make pattern pieces and cut the fabric.
 - a. Cut fabric:
 1. Upper Fabric – Cut 2 using upper fabric pattern (17" X 5.5" rectangle)
 2. Lower Fabric – Cut 2 using lower fabric pattern (17" X 13.5" rectangle)
 3. Handles – Cut 2 using handle pattern (26" X 4" rectangle)

Assemble Bag

1. Make the outside:

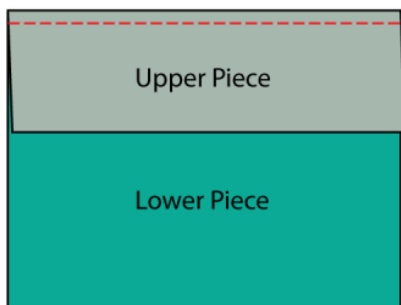

- a. Join one upper fabric piece to one lower fabric piece by pinning right sides together along the 18" side. Stitch using a $\frac{1}{2}$ " seam allowance; backstitch both ends of the seam.


VOCABULARY

Right side of fabric: the side of the fabric that you want the world to see (outside of your tote). Sew with right sides together so the stitching will be on the inside of the finished project.

Wrong side of fabric: the side of the fabric that you do not want seen (inside of your tote). The wrong side of the fabric may have a different appearance than the right side.

Backstitching/backtack: stitch in reverse for a few stitches at the beginning and end of the seam.

- b. Zigzag stitch or run a single line of straight stitching through both layers of the seam allowance, close to the edge to finish the seam allowance.

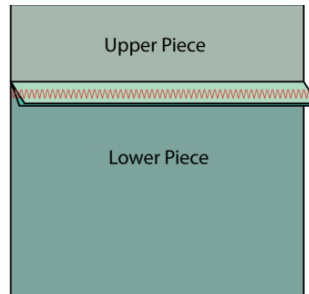

- c. Repeat steps 1a and 1b. You now have two panels – the front and back of your bag.

2. **Make the Handles:** (ignore if using webbing)


- a. Fold one handle piece in half along the long edge, right sides together. Pin and stitch using a $\frac{1}{2}$ " seam allowance. Backstitch both ends of the seam. Leave both ends of the handle open.
- b. Repeat step 2a for the other handle.




- c. Turn each handle right side out by attaching a safety pin to one end and pulling it through the tube.
- d. Press handles flat.

3. **Attach the Handles:** (or webbing)

- a. Place one handle on the outside (right side of fabric) of a bag panel. Align the handle ends with the top raw edge, 4" from each side. Be certain that the handle is not twisted and that it faces downward. Pin both ends of the handle in place.
- b. Sew a zigzag or straight stitch across the entire top edge, using a $\frac{1}{2}$ " seam allowance and backstitching. This secures the handle ends to the bag panel.

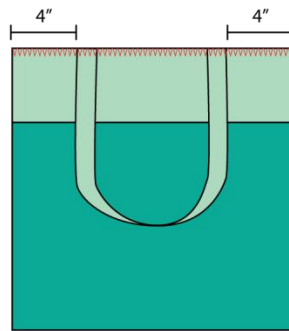


- c. Turn the panel so the wrong side of the fabric is facing up. Fold over the top edge 1.5", being careful that the handle is upright and straight. Pin and sew with a straight stitch $\frac{1}{4}$ " from the top edge. Finally, zigzag or straight stitch the bottom edge of the fold.
- d. Repeat steps 3a-3c using the other handle and the other bag panel. Iron seams.

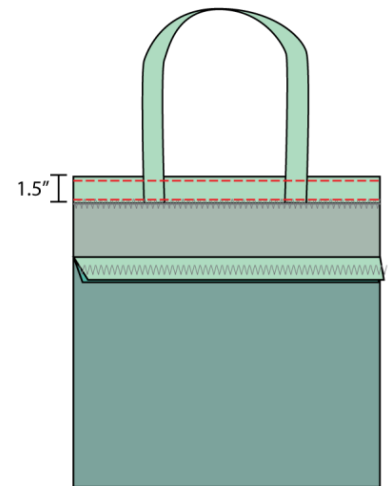


4. Join front and back panels:

- a. Place the two panels right sides together, matching the upper edges. Sew along both sides and the bottom, using a $\frac{1}{2}$ " seam allowance and backstitching. Zigzag or straight stitch the seam allowance. Iron side seams

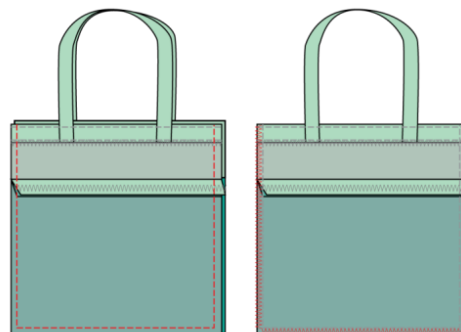

5. Finish with Square Corners:


- Grab one of the bottom corners, pull the front fabric away from the back fabric, and fold it flat. Make the tip nice and pointy while centering the seamlines.
- Move a ruler up the point until it measures 3" (readjust if the seamline is not on the 1.5" mark). Mark with a pencil or pen. Sew a straight line with backtacks on the line.

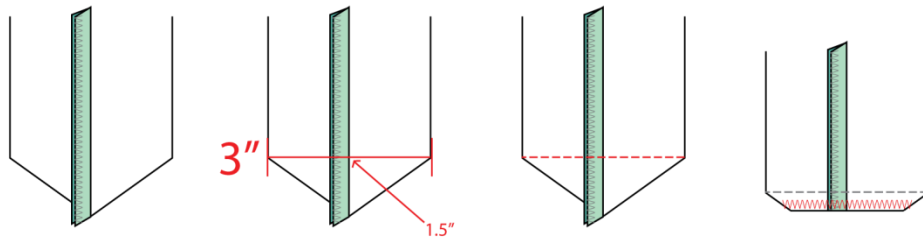

- Cut the extra fabric away, leaving a $\frac{1}{2}$ " seam allowance. Zigzag stitch or straight stitch the seam allowance.
- Repeat steps 5a-5c with the other corner.

6. Turn and Press:

- Turn the bag right side out and iron.

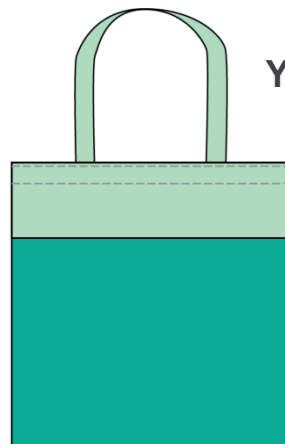

You are done!